


# MyRecline F4 by Flexsteel

User Manual

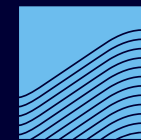

FLEXSTEEL®  
HOME


© Flexsteel Industries, Inc. 7/17

## MyRecline F4 by Flexsteel

# General Information

**MyRecline F4 by Flexsteel** is an application that controls your Flexsteel reclining furniture through your mobile device.

MyRecline F4 uses the latest wireless technology to communicate with your Flexsteel reclining furniture. In order for the MyRecline F4 app to work, Bluetooth® technology must be enabled on your mobile device.

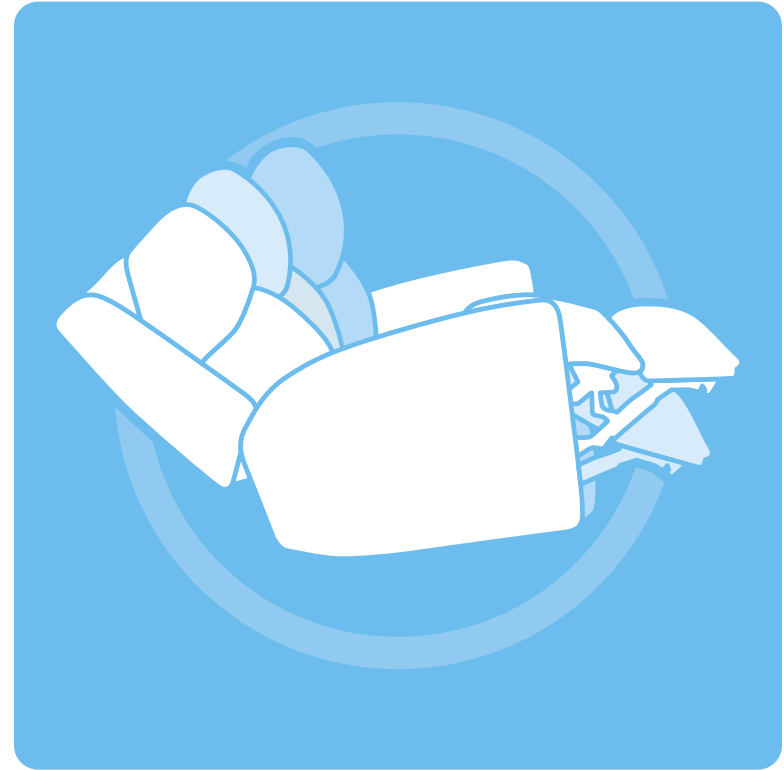

# MyRecline F4 by Flexsteel


## MyRecline F4 by Flexsteel

# Syncing Your Device

### Before You Start

- Open your device's app store, and download the MyRecline F4 by Flexsteel app to your mobile device.
- Enable the Bluetooth® function on your mobile device.
- Make sure your Flexsteel reclining furniture has power and the buttons are working.
- Make sure your device is within 30 feet of your Flexsteel reclining furniture.

Open the app, and tap Refresh to sync the MyRecline F4 app to your Flexsteel reclining furniture. No additional steps are required.

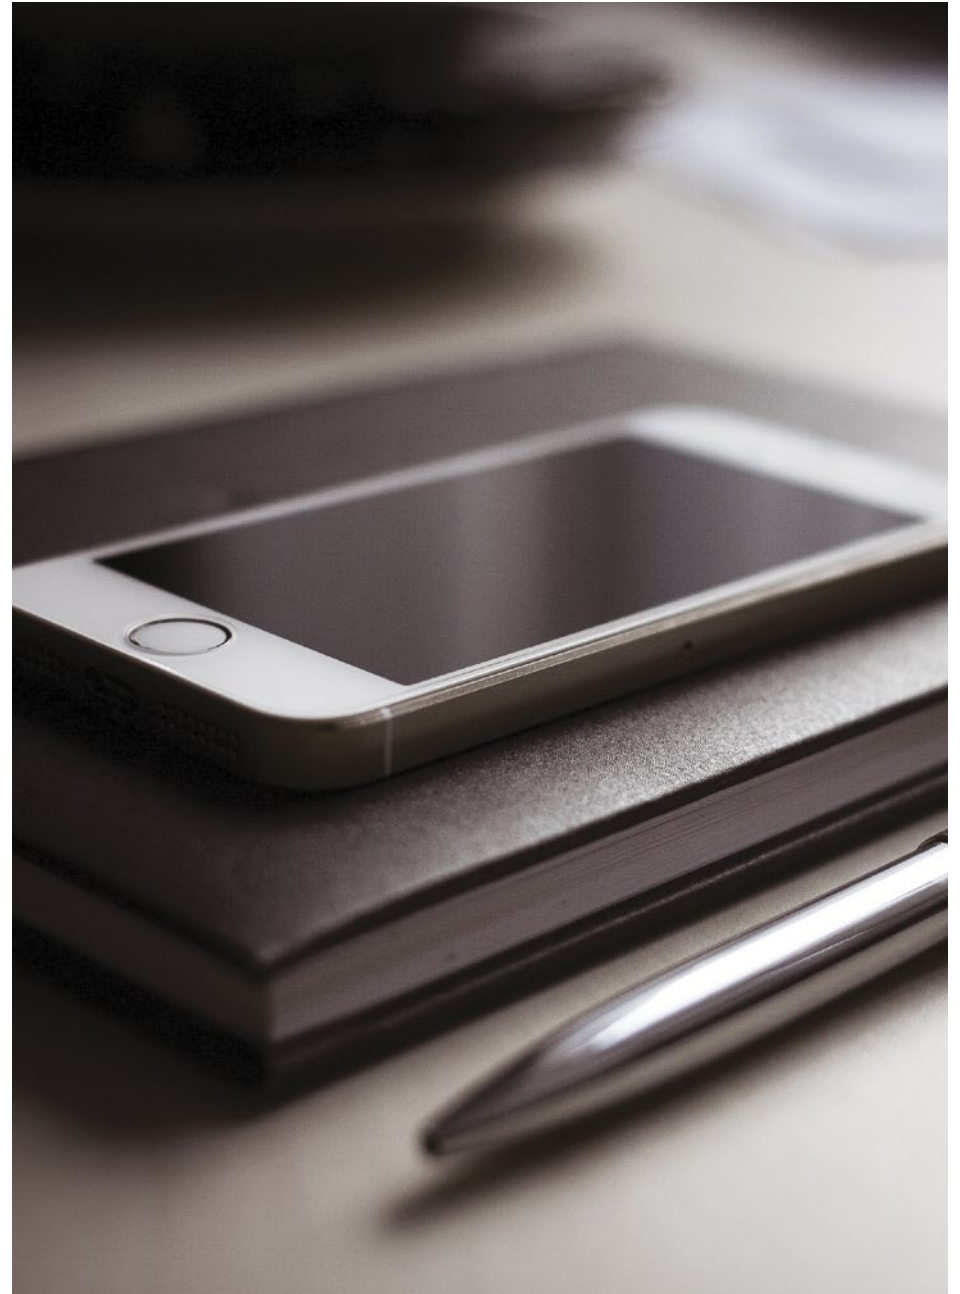

# MyRecline F4 by Flexsteel App Interface


Tap the **Settings** icon to view the Settings Screen.

Tap the **Back** icon to return to the Home Screen.


Tap the Flexsteel product name to view the Remote Control Screen (see page 5).

List of Flexsteel products within range\*  
*\*The effective Bluetooth® range is within 30 feet.*

Tap **Refresh** to refresh the list of Flexsteel products within range.

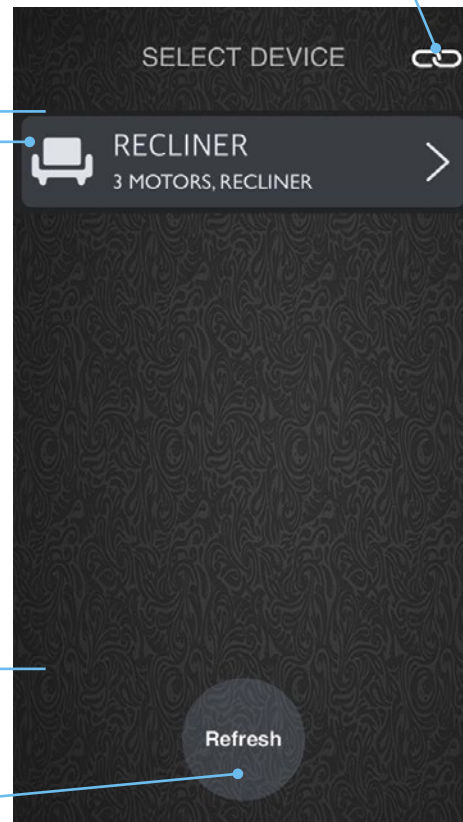

**Home Screen**

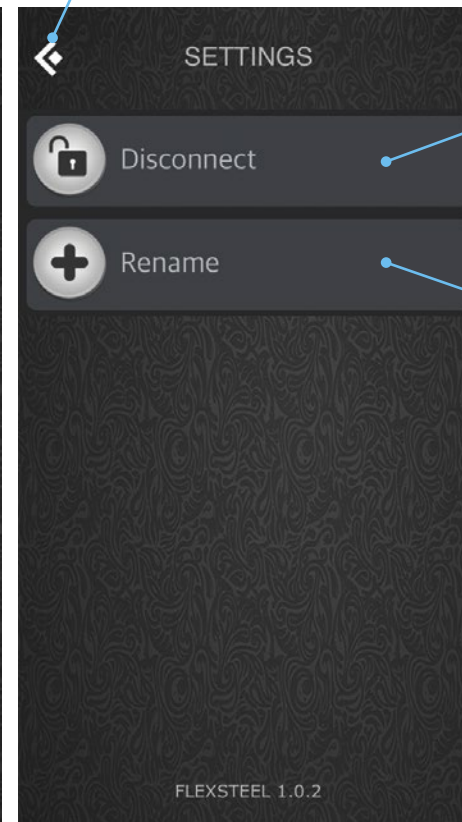

**Settings Screen**

Tap **Disconnect** to disconnect your mobile device from your Flexsteel reclining furniture.

Tap **Rename** to rename your Flexsteel reclining furniture on your mobile device.

# MyRecline F4 by Flexsteel


**To adjust headrest:** Press and hold the right Headrest icon to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press and hold the left Headrest icon.

**To recline:** Press and hold the up arrow icon to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press and hold the down arrow icon.

**To adjust lumbar support:** Press and hold the right Lumbar icon to smoothly raise and adjust the lumbar support to any position. To lower the lumbar support and return it to its original position, press and hold the left Lumbar icon.

**To close all:** To simultaneously return the headrest, footrest, and lumbar support to their original positions, tap the home icon, or press and hold the down arrow icon.

**To program memory positions:** To store a favorite position, press and hold the **P** icon until it flashes. Then tap the **1** icon or **2** icon to save the position. Only one position can be stored under each number.

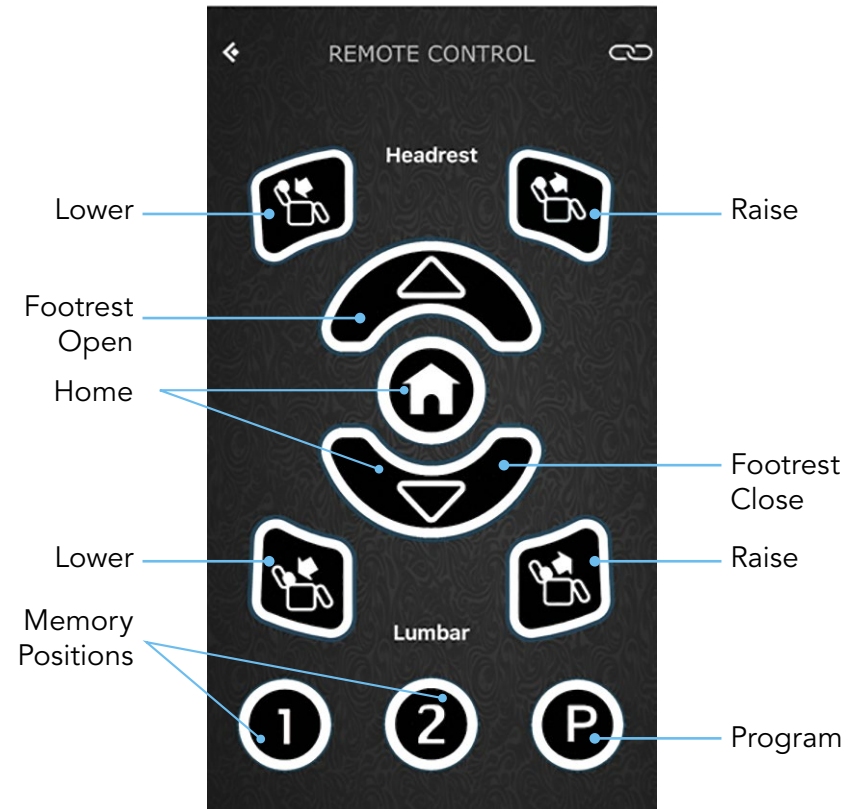

**Remote Control Screen**