 


Flexsteel Power Reclining Operating Instructions

Furniture with Power Headrest(s)

 
If your furniture is equipped with a power headrest, it will feature one of the below power button controls. Follow the instructions for the illustration that matches the control installed on your furniture.

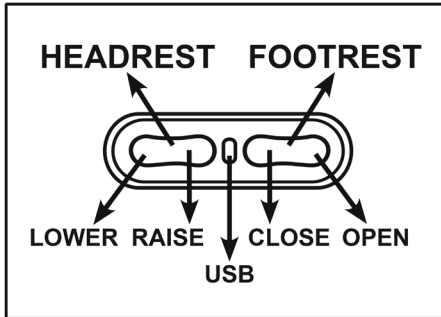

Control Type 1

To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

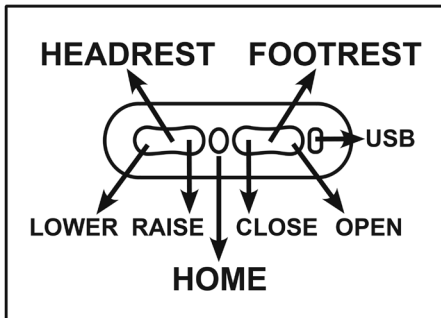


Control Type 2

To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

 To close all: To simultaneously return the headrest and footrest to their original positions, press the Home button.

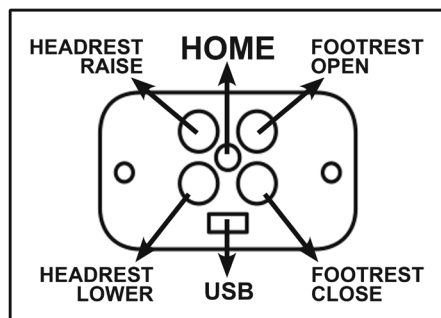

Control Type 3

 
To recline: Sit on the furniture, and press the top button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the bottom button closest to the footrest.

To adjust headrest: Press the top button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the bottom button closest to the backrest.

To close all: To simultaneously return the headrest and footrest to their original positions, press the Home button.

Flexsteel Power Reclining Operating Instructions

Furniture with Power Headrest(s), Cont.

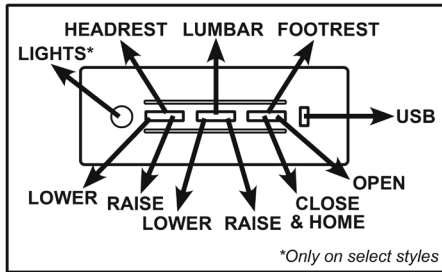

Control Type 4

 
To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

To adjust lumbar support: Press the front of the center button to smoothly raise and adjust the lumbar support to any position. To lower the lumbar support and return it to its original position, press the back side of the center button.

To close all: To simultaneously return the headrest, footrest, and lumbar support to their original positions, press and hold the back side of the button closest to the footrest.

To control lights: To turn the LED lights on or off, press the round button closest to the backrest (only on select styles).

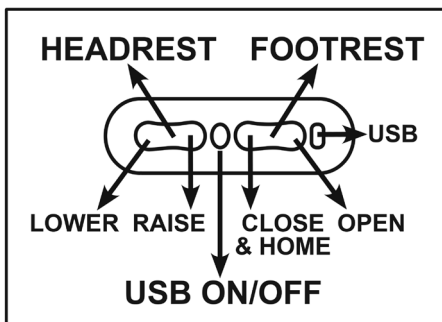

Control Type 5

To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

 
To close all: To simultaneously return the headrest and footrest to their original positions, press and hold the back side of the button closest to the footrest.

To control USB power: To turn the USB power on or off, press the USB On/Off button. When the button is out and its red edge is visible, the port is on. When the button is pushed in and the red edge is not visible, the port is off.

Flexsteel Power Reclining Operating Instructions


Furniture without Power Headrest(s)

If your furniture is not equipped with a power headrest, it will feature one of the below power button controls. Follow the instructions for the illustration that matches the control installed on your furniture.

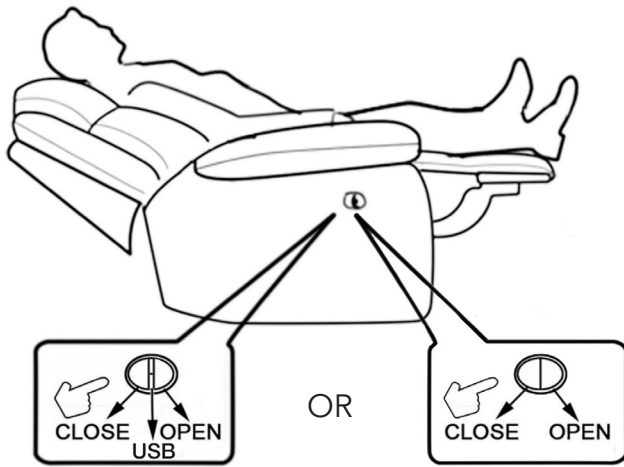


Power Button Control

 Sit on the furniture, and press the front of the button to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button.

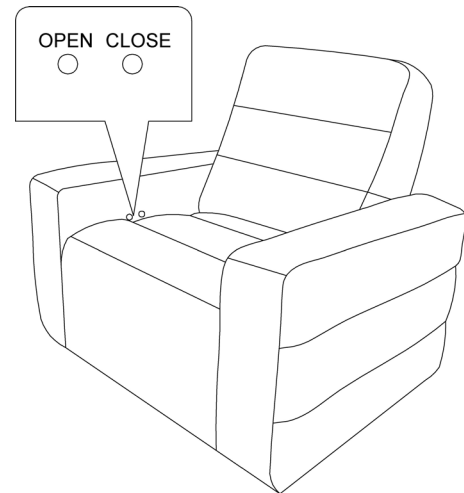


Hidden Power Button Control

 Sit on the furniture, and press the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press button closest to the backrest.

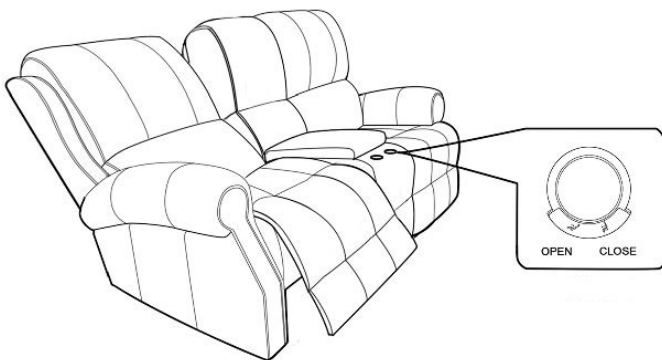

Cup Holder Control

 Sit on the furniture, and press the button with an image of a reclining person to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the button with an image of an upright person.

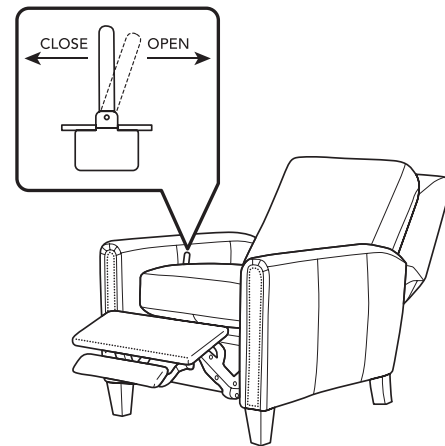

Hidden Toggle

Sit on the furniture, and pull the toggle toward the back of the furniture to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, push the toggle forward.